
EAGLE SECURITY PRODUCTS, INC.



MODEL 2250

**FALSE ALARM TERMINATOR™
TWO WAY AUDIO SYSTEM**

INSTALLATION INSTRUCTIONS

CAUTION: MANUAL FOR 2250 REV. 3 AND SUBSEQUENT ONLY.



**TWO-WAY
AUDIO**
Alarm Verification

“LEADERS IN TWO WAY AUDIO TECHNOLOGY”

TABLE OF CONTENTS, DIAGRAMS & TABLES

1.0 GENERAL	3
1.1 FEATURES.....	3
1.2 DEFINITIONS.....	3
2.0 REQUIREMENTS	3
2.1 POWER.....	3
2.2 SYSTEM.....	3
2.3 CENTRAL STATION.....	4
3.0 INSTALLATION	4
3.1 INSTALLATION SUMMARY.....	4
3.2 OPTION SWITCH DESCRIPTION.....	4
3.3 EEPROM PROGRAMMING.....	5
3.4 WIRING AND PLACEMENT.....	5
3.5 ADJUSTMENTS/INSTALLATION.....	8
3.6 SPEAKER/MIC INSTALLATION.....	8
3.7 COMMUNICATOR PROGRAMMING.....	8
4.0 ACTIVATION	8
4.1 IMMEDIATE TURN ON.....	8
4.2 USING RING DETECTOR.....	8
4.3 LED STATUS INDICATOR.....	9
4.4 CENTRAL STATION DETECTION.....	11
4.5 AUTO-TRIP.....	11
4.6 TRIP INPUT.....	11
4.7 ENABLE INPUTS.....	11
5.0 CONTROLLING THE MODULE	12
5.1 SWITCHING BETWEEN TALK & LISTEN.....	12
5.2 EXTENDING & DISCONNECTING.....	12
5.3 SUBSEQUENT ALARM REPORTING.....	12
5.4 MICROPHONE ZONE CONTROL.....	13
5.5 SPEAKER ZONE CONTROL.....	14
5.6 INTERNAL CONTROLS.....	14
6.0 OPTIONAL CONNECTIONS	14
6.1 INTERNAL SIREN.....	14
6.2 EXTERNAL SIREN DRIVER.....	14
6.3 MODEL 1403 REMOTE CONTROL RELAY MODULE.....	14
6.4 MODEL 1423 SPEAKER & MIC EXPANDER.....	14
7.0 NOTES & RETURNS	15
8.0 FCC REQUIREMENTS	16
TABLE 1: SUMMARY OF SWITCH SETTINGS.....	5
TABLE 2: CONTROL/DIALER CONNECTOR (P3) - POWER & TRIGGER WIRING.....	6
TABLE 3: EXT CONNECTOR - EXTERNAL SIREN WIRING CONNECTIONS.....	6
TABLE 4: RELAY CONNECTOR (P7) - RELAY WIRING CONNECTIONS.....	7
DIAGRAM 1: WIRING MULTIPLE SPEAKERS.....	9
DIAGRAM 2: WIRING SCHEMATIC.....	10
TABLE 5: LED STATUS INDICATOR.....	9
TABLE 6: TOUCH-TONE® COMMAND SUMMARY.....	13
TABLE 7: MICROPHONE TOUCH-TONE® COMMAND SUMMARY.....	13

1.0 GENERAL.

1.1 FEATURES.

The False Alarm Terminator™ features include:

- ◆ Self contained speaker/microphones with quick, convenient terminal connectors.
- ◆ Three microphone zones, individually controlled. Up to 4 mic's per zone.
- ◆ Two wire, non-shielded, microphones.
- ◆ Eagle's Enhanced Voice for extraordinary clarity in talk back mode.
- ◆ Central station detection with automatic disconnect upon central station receiver hang-up.
- ◆ Compatibility with all digital communicators and control panels.
- ◆ Activation by auto-trip with or without enables (2) which requires no hard trigger from the control panel. Direct activation (hard trip) with or without enable (1).
- ◆ Answering machine and/or downloadable communicator bypass.
- ◆ Remote volume control of the microphone from the central station.
- ◆ Optional Speaker & Mic Expander for system expansion.
- ◆ Optional EEPROM unit offers full time call back, selectable call back acknowledgment codes, Voice message bypass and 2 programmable codes!
- ◆ Microphone piezo filter. Integrated siren driver.

1.2 DEFINITIONS.

LINE HOLD - The immediate turn on of the audio module which allows the module to use the phone call generated by the digital communicator when communicating with the central station.

CALL BACK - A procedure when the central station calls the premises after an alarm activation to initiate two way communications.

MANUAL CONTROL - The central station controls who talks and who listens with commands generated from a Touch-Tone® phone.

LISTEN ONLY / TALK ONLY - Both terms with respect to the central station. LISTEN ONLY allows the central station to listen without talking. TALK ONLY allows the central station to talk without listening.

2.0 REQUIREMENTS.

2.1 POWER.

Operating voltage: 9 to 14 VDC

Current draw (standby): 44 mA max. (with one 2172)

Current draw (active): 180 mA max. (with one 2172)

Current draw (siren): 210 mA max. (with one 2172)

2.2 SYSTEM.

The Eagle False Alarm Terminator™ requires the following hardware:

1. A communicator/control panel to provide initial communication with the central station.
2. Connections to power (12 VDC & Ground) and telephone (Tip & Ring).
3. A minimum of one speaker/microphone (Eagle Model 2172).

2.3 CENTRAL STATION.

1. A receiver with two way capability (stays on line after kiss off) and/or an Eagle UTA™ Interface.
2. A Touch-Tone® phone in parallel with the receiver line if used in the line hold mode.

3.0 INSTALLATION.

3.1 INSTALLATION SUMMARY.

1. Mount the False Alarm Terminator™ into control panel.
2. Connect RJ-31X cord from RJ-31X block to **TELCO**. Connect **DIALER** to control panel phone.
3. Run cable (standard 4 conductor) from the Terminator to the 2172 speaker/mic location.
4. Connect cable from the speaker/mic to the Terminator™ (Speaker to **SPK & SPK**, Microphone to **M1**).
5. Mount the Eagle Model 2172 speaker/microphone.
6. Repeat steps 4 - 6 with additional Model 2172's, if desired, except connecting Microphone signal to **M2** or **M3**. Speakers should be connected maintaining a minimum of 8 ohms impedance, see Diagram 1.
7. If using external siren driver, connect to **BROWN** and **RED** wires on the EXT header **OR** if using TERMINATOR™ internal driver and the positive bell output is active during alarm, connect positive bell output to the **BLUE** wire on the **CONTROL/DIALER** header **OR** if the negative bell output is active during alarm, connect negative bell output to the **GREEN** wire on the **CONTROL/DIALER** header.
8. Set option selection switches (or program EEPROM).
9. Connect Earth Ground to terminal strip. Connect power & system ground to terminal strip.

3.2 OPTION SWITCH DESCRIPTION.

The Eagle False Alarm Terminator™ has many modes of operation. It can be custom configured for each installation. The following is a description of each of the option setting switches (DIP Switch model only).

SW1: Selects the type of activation; Direct wired (hard) trip or Auto trip.

SW1: ON = Direct wired trigger.
OFF = Auto trip.

SW1 ON: Use this setting when you have a control panel which provides a two way activation output.
SW1 OFF: Use this setting when there is no two way activation output on the control panel.

SW2: ON = ENABLES are required for either Direct (hard) wired or Auto trip.
OFF = ENABLES are not required.

SW2 ON: ENABLES are required. Reference paragraph 4.7 for explanation of enablers.
SW2 OFF: ENABLES are not required. Reference paragraph 4.7 for explanation of enablers.

SW3: ON = Trigger causes module to activate in line-hold (immediate turn-on).
OFF = Trigger activates 5 minute 1 ring call back window.

SW3 ON: A trigger input (either hard wired or auto-trip) causes the module to activate immediately in the line hold mode. This is the most widely used mode.

SW3 OFF: A trigger input (either hard wired or auto-trip) causes the module to activate its five minute one ring call back mode.

SW4: ON = Called party hang up enabled.
OFF = Called party hang up disabled.

SW4 ON: The auto disconnect feature is enabled. The module will automatically disconnect if the receiver disconnects before the central operator picks up the line. This feature requires a called party disconnect signal from the local central office.

SW4 OFF: The auto disconnect feature is disabled.

SW5: ON = Enables the internal siren driver.
 OFF = Disables the internal siren driver. Enables external siren driver.

When using an external siren driver, this switch must be in the OFF position. If the internal siren driver is desired to be used, select ON. See paragraph 6.1 for further information.

SW6: ON = Subsequent Alarms will not shut down TERMINATOR™. Two Way will remain active.
 OFF = Subsequent Alarms will shut down TERMINATOR™ & allow alarm to report.

TABLE 1: SUMMARY OF SWITCH SETTINGS.

SWITCH	FUNCTION	ON	OFF
1	TRIGGER	DIRECT (HARD)	AUTO TRIP
2	ENABLES	REQUIRED	NOT REQUIRED
3	TRIGGER FUNCTION	IMMEDIATE TURN ON	SET UP RING DETECT
4	AUTO DISCONNECT	DISCONNECT ON	DISCONNECT OFF
5	SIREN DRIVER	INTERNAL	EXTERNAL
6	SUBSEQUENT ALARMS	ALARM NOT REPORT	WILL REPORT

3.3 EEPROM PROGRAMMING.

The Eagle False Alarm Terminator™ EEPROM version has many modes of operation. It can be custom programmed to suit many applications.

The EEPROM version has all the options of the DIP SWITCH version PLUS:

- Can always answer an incoming call in a specified (programmed) number of rings.
- Can select the acknowledgment code for call back operations. Selectable are *, *, 5 5 *, or custom 4 digits.
- Can bypass “Voice Message” service offered by phone company using ring pause ring option.
- Has two programmable access codes, one for user (access anytime) and one for central station (access only after alarm activation).

Please refer to the EEPROM PROGRAMMING reference guide enclosed for complete EEPROM programming information.

3.4 WIRING AND PLACEMENT.

3.4.1 CONTROL/DIALER CONNECTOR (P3) - POWER & TRIGGER WIRING CONNECTIONS

DESCRIPTIONS

BROWN: GROUND connection to alarm panel auxiliary power out.

RED: +12 VDC connection to alarm panel auxiliary power out.

ORANGE: Two functions: A Positive Edge Direct (hard) wired TRIGGER. (Input must go negative (0 to 2 VDC) then back positive (4 to 12 VDC) in order to trigger.) Also used as a second (negative) ENABLE for the auto trip function. (Input must be negative (0 to 2 VDC) to ENABLE the auto trip.)

YELLOW: Two functions: A Negative Edge Direct (hard) wired TRIGGER. (Input must go positive (4 to 12 V DC) then back negative (0 to 2 VDC) in order to trigger.) Also used as a second (positive) ENABLE for the auto trip function. (Input must be positive (4 to 12 VDC) to ENABLE the auto trip.)

GREEN: Connect negative active bell output here. This activates the TERMINATOR'S internal siren driver. Is also used as an ENABLE if SWITCH #2 is ON.

BLUE: Connect positive active bell output here. This activates the TERMINATOR'S internal siren driver. Is also used as an ENABLE if SWITCH #2 is ON.

TABLE 2: CONTROL/DIALER CONNECTOR (P3) - POWER & TRIGGER WIRING CONNECTIONS.

WIRE	CONNECTION
BROWN	Negative supply input (Ground)
RED	Positive supply input (+12 VDC)
ORANGE	Positive audio enable #1 or Positive Trigger (see note)
YELLOW	Negative audio enable #1 or Negative Trigger (see note)
GREEN	Activates TERMINATOR™ internal siren, Negative edge.
BLUE	Activates TERMINATOR™ internal siren, Positive edge.

3.4.2 EXT CONNECTOR - EXTERNAL SIREN WIRING CONNECTIONS.

It may be desired to connect an external siren driver to the Eagle False Alarm Terminator™ utilizing the speaker within the Model 2172 SPEAKER/MIC instead of the Terminator's internal siren driver. The siren connects to the BROWN & RED wires on the EXT header.

WARNING: The speaker used in the self-contained 2172 Speaker/Mic/Terminator combination is rated to 3 Watts. If the siren driver output being used exceeds 3 Watts @ 8 ohms the speaker will be damaged and the warranty voided. Consult with the manufacturer.

Eagle recommends the Eagle Model 1401 Siren Driver if not using either the Terminator™ internal siren driver or a driver built into a control panel.

TABLE 3: EXT CONNECTOR - EXTERNAL SIREN WIRING CONNECTIONS.

WIRE	CONNECTION
BROWN	External siren input.
RED	External siren input.

DESCRIPTIONS

BROWN & RED: External siren driver input. Both wires must be used. Do not exceed 2 AMPS.

3.4.3 AUX BOARD CONNECTOR (P6) - OPTIONS WIRING CONNECTIONS.

AUX BOARD CONNECTOR (P6) - Options wiring connections is for use with proprietary Eagle enhancement modules. There are no user serviceable connections.

3.4.4 RELAY CONNECTOR (P7) - RELAY WIRING CONNECTIONS.

The RELAY provided on the False Alarm Terminator™ provides switching for external devices automatically when the module activates & de-activates. The relay is energized (changes state) automatically when the module is activated. The relay returns to its de-energized state when the module is shut down.

TABLE 4: RELAY CONNECTOR (P7) - RELAY WIRING CONNECTIONS.

WIRE	CONNECTION
BROWN	Common 1; max 2 amps
RED	Normally Closed 1; max 2 amps
ORANGE	Normally Open 1; max 2 amps
YELLOW	Common 2; max 2 amps
GREEN	Normally Closed 2; max 2 maps
BLUE	Normally Open 2; max 2 amps

DESCRIPTIONS

BROWN: COMMON #1 connection. Maximum 2 amps.

RED: NORMALLY CLOSED #1 connection. Maximum 2 amps.

ORANGE: NORMALLY OPEN #1 connection. Maximum 2 amps.

YELLOW: COMMON #2 connection. Maximum 2 amps.

GREEN: NORMALLY CLOSED #2 connection. Maximum 2 amps.

BLUE: NORMALLY OPEN #2 connection. Maximum 2 amps.

3.4.5 MAIN TERMINAL BLOCK CONNECTIONS.

DESCRIPTIONS

≡: Earth ground connection. MUST BE CONNECTED TO ENSURE PROPER LIGHTENING PROTECTION. WARRANTY VOID IF NOT CONNECTED! Examples of good EARTH GROUND sources are a cold water pipe or the ground on an electrical outlet.

SPK & SPK: Speaker connections. **Maintain a minimum of eight (8) ohms of total impedance at all times utilizing a series/parallel combination. See Diagram 1.**

M1, M2 & M3: Microphone connections. Zones 1,2 and 3, respectively. Each microphone zone requires two wires, polarity independent.

3.5 ADJUSTMENTS/INSTALLATION.

SPK - Used to adjust the gain of the speaker; **CW** - increases gain; **CCW** - decreases gain.

3.6 SPEAKER/MIC INSTALLATION.

3.6.1 LOCATION.

A speaker/mic can cover a range of up to 2500 square feet. This is dependent on the environment in which they are installed. Installation is recommended at or near system keypads with a minimum of one per floor, excluding basement.

3.6.2 QUANTITY OF SPEAKER/MICS.

Up to four (4) Model 2172 microphones *per channel* may be used with the Eagle False Alarm Terminator. Up to four speakers *total* may be used when connected in a series-parallel combination so **as not to drop below eight (8) ohms of total impedance**. See Diagram 1.

3.7 COMMUNICATOR PROGRAMMING.

When programming the digital communicator, it is advised to begin the "TELEPHONE NUMBER" with "***70**" (tone dialing) or "**1170**" (pulse dialing). This will allow uninterrupted communication when the subscriber has call waiting.

4.0 ACTIVATION.

4.1 IMMEDIATE TURN ON.

When option **SW3** is set in the ON position, the module will activate when a trigger is received on either of the ORANGE or YELLOW wires or when the unit's auto-trip activates the module. The hard trigger must correspond with the completion of the communicator's alarm report (kiss off from the Central Station). When the two way audio module is activated in this mode, the operator, if listening at that time, will hear a "bop-beep-bop" tone acknowledgment generated by the module. This is the operator's notification that the module is on and active. The LED will flash four (4) times every six seconds to indicate that the unit has been activated in the line-hold mode and is waiting for an operator to press any touch tone digit. Once the operator presses a touch tone digit, the LED will stay on until disconnect.

NOTE: THE CENTRAL STATION RECEIVER MUST BE CAPABLE OF A "LISTEN-IN" FUNCTION, I.E., THE RECEIVER MUST HOLD THE PHONE LINE OPEN UNTIL AN OPERATOR CAN PICK UP THE LINE. THE EAGLE UTA CAN PROVIDE THIS FUNCTION IF YOUR RECEIVER CANNOT. CONTACT EAGLE FOR INFORMATION.

The operator can control the operation of the module using a Touch-Tone® phone per Paragraph 5.0.

4.2 USING RING DETECTOR.

4.2.1 DESCRIPTION.

FIVE MINUTE WINDOW.

The FALSE ALARM TERMINATOR™ has a call back mode which activates upon a trip. The call back mode can be initiated with hard trip input or from the auto trip circuit. This sets up the system to answer an incoming call after an alarm which has just been reported by the digital communicator (**SW3** is OFF). The central station operator will have 5 minutes in which to call back the system and have it answer within one ring. This feature allows call back **only** within five minutes of an alarm activation. The LED will flash two flashes every six seconds to indicate it is in the call back mode waiting for the phone to ring.

4.2.2 CALL ANSWERING.

When the system detects an incoming call, it will pick up the phone line and send a “bop-beep, beep bop” as an answer acknowledgment. The LED will flash three flashes every six seconds to indicate it is waiting for an acknowledgment code to be entered (from the central operator).

The system now has the line, but two way is **NOT** active.


The operator has 15 seconds to enter the acknowledgment code. The code is ***55*** to activate TWO WAY.

If the code is not sent in 15 seconds, the Terminator will hang-up and continue in the one ring call back mode for an additional five minutes.

When the correct code is received, the system will generate a "beep-beep-beep" acknowledgment and go directly into listen-in mode. The LED will remain on steady until disconnect.

The operator can control the operation of the module using a Touch-Tone® phone per Paragraph 5.0.

DIAGRAM 1: WIRING MULTIPLE SPEAKERS.

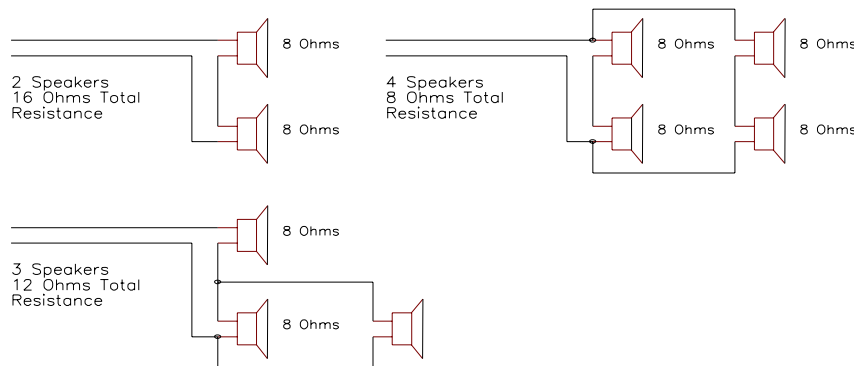


4.3 LED STATUS INDICATOR.

The False Alarm Terminator™ features an LED status indicator. From the LED status indicator, a technician can determine the current status of the module. The following chart summarizes the five different modes.

TABLE 5: LED STATUS INDICATOR.

# FLASHES EVERY SIX SECONDS	MODE
1 (ONE)	STANDBY OPERATION - ALL OK
2 (TWO)	ONE RING CALL BACK MODE, WAITING FOR RING
3 (THREE)	ONE RING CALL BACK MODE, WAITING FOR ACKNOWLEDGMENT CODE.
4 (FOUR)	TRIGGERED. WAITING FOR CS TO SEND COMMAND.
STEADY ILLUMINATION	TWO WAY ACTIVE.

DIAGRAM 2: WIRING SCHEMATIC.

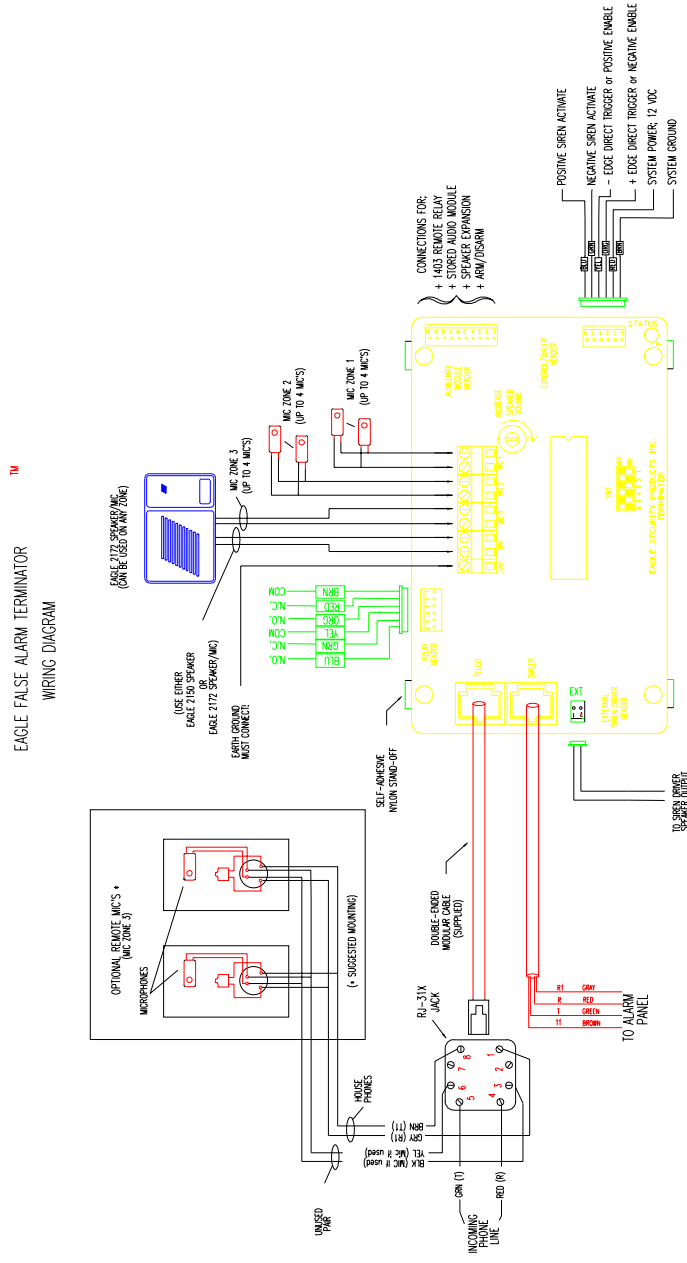

4.4 CENTRAL STATION DETECTION.

The FALSE ALARM TERMINATOR™ features central station detection with auto-disconnect. This feature allows the module to detect if the central station receiver has dropped off the line before the central station operator has picked up on the line. If the module detects a receiver line drop, it will shut down and enable the 5 minute call back window. Detection takes about 15 to 20 seconds. (This feature works in most area in the United States. Accounts in some rural areas may not be able utilize this feature due to current central office equipment. If this feature is not available, the module will function properly, but without the central station detection feature.)

Additionally, if the central station operator fails to send a shut down command, the Terminator™ will automatically shut down (within 15 seconds) of the operator hanging up.

Call waiting may cause erratic operation with this feature. In areas where call waiting can not be disabled (See paragraph 3.7) and the premises has call waiting, it is recommended to disable central station detection (**SW4-OFF**).

4.5 AUTO-TRIP.

The FALSE ALARM TERMINATOR™ Two Way Audio System utilizes an auto-trip feature. This feature is essential for control panels that do not have a two way activation output. The auto-trip activates the module by monitoring the phone line and detecting when the control panel/communicator finishes sending its data to the receiver. When finished, the module activates maintaining the phone line connection at the premises. The auto-trip feature can be disabled at the time of installation by setting **SW1 ON**. (See Paragraph 3.2).

When **SW1** is in the OFF position the auto-trip feature is active.

When **SW1** is in the ON position, the auto-trip feature is disabled. When disabling the auto-trip, the hard trip input, the ORANGE or YELLOW wire, is required. (See paragraph 4.6.)

4.6 TRIP INPUT.

The FALSE ALARM TERMINATOR™ has a direct wired trigger input. This input is used to activate the module from a control panel which has a trip for two way voice. This trip must occur at kiss-off. Consult your control panel manual or call Eagle technical assistance for further information.

4.7 ENABLE INPUTS.

The TERMINATOR™ has two sets of ENABLERS (qualifiers). Talk Listen qualifiers enable two way to engage only if a siren or voltage input is activated prior to a communication. One set of ENABLERS is the GREEN and BLUE wires, the TERMINATOR's internal siren triggers. These wires not only activate the internal siren, but also act as a dual trip qualifier. This means the siren output and communicator have to be active to engage two way. Either one without the other will not activate the module. This voids activation's by trouble signals.

The second set of ENABLERS are the ORANGE and YELLOW wires. These also have a dual function. If SWITCH #1 is in the OFF position (AUTO TRIP) these wires act as an ENABLE for the AUTO TRIP function. ENABLE inputs can be generated from the control panel using **programmable outputs, siren outputs**, etc. They are advantageous because they can eliminate unwanted two way activation's under certain alarm reporting such as opening & closing reports, low battery reports, system test reports and others.

5.0 CONTROLLING THE MODULE.

5.1 SWITCHING BETWEEN TALK & LISTEN.

After the module has been successfully activated by one of the methods described above, the operator can control the operation of the system using a Touch-Tone® phone in the following manner:

To switch to "LISTEN ONLY, HIGH GAIN", press and release digit **3**. To switch to "LISTEN ONLY, NORMAL GAIN", press and release digit **2**. To switch to "TALK ONLY", press and release digit **1**. The operator can switch back and forth between these modes as often as one wishes independent of the mode in which the module was in when activated.

CAUTION: IF THERE IS A LOUD, CONTINUOUS BACKGROUND NOISE, SUCH AS A RADIO, THE CENTRAL STATION OPERATOR SHOULD NOT ATTEMPT TO INCREASE THE GAIN OF THE TERMINATOR™. THIS MAY CAUSE THE SYSTEM TO LOOSE THE ABILITY TO RECOGNIZE THE TONES FROM THE CENTRAL STATION. IF THE MODULE "LOCKS-UP" INTO THE "LISTEN ONLY, HIGH GAIN" MODE, PRESS AND HOLD DIGIT **2** FOR A MINIMUM OF FIVE (5) SECONDS. THIS SHOULD UNLOCK THE MODULE. REPEAT IF NECESSARY.

5.2 EXTENDING & DISCONNECTING.

The FALSE ALARM TERMINATOR™ provides five (5) minutes of two way communication. During two way, the module will generate a "beep" once every minute. Upon the fourth and final minute of two way the module will generate a two tone "beep bop" warning the central station that there is only one more minute of two way before the module automatically disconnects. These beeps will be heard at the premise when module is in the "TALK MODE". These beeps will always be heard by the central station. To extend the listen in shut down time (reset to 5 minutes), press and release digit **7** at any time during the two way (before the module disconnects). Additionally, anytime a command is sent to the FALSE ALARM TERMINATOR™ (a **1**, **2**, **3** or **7**) the module will automatically reset the five minute timer. The only time the **7** command need actually be sent is when the module is used in the "LISTEN ONLY" mode for the duration of the call. To shut down the module, press and release digit **9** at any time. Before the module shuts down it will generate a "beep-beep-bop" tone indicating it is disconnecting. To shut down the module and initiate the five minute call back window, press and release digit **8** at any time. This will allow the central station or any other party to call back and have an active two way session. (This is beneficial when a home or business owner wishes to have an active two way session after the central station has finished.)

Every time either shut-down command is sent (an **8** or a **9**) the module will generate an acknowledgment tone (beep-beep-bop). This alerts the central that the command was received and will be exercised.

5.3 SUBSEQUENT ALARM REPORTING.

The FALSE ALARM TERMINATOR™ has provisions for subsequent alarm reporting. This provides the central station operator with the capability of selecting what will happen when a subsequent alarm occurs while two way is active. Subsequent alarm reporting has two options which are selected by the position of DIP SWITCH #6.

If DIP SWITCH #6 is in the OFF position, the TERMINATOR™ will hang up for a subsequent alarm prior to the c.s. operator picking up on the line.

If DIP SWITCH #6 is in the ON position, the TERMINATOR™ will NOT hang up for a subsequent alarm prior to the central station operator picking up on the line. The only exception to this is if two subsequent alarm reportings occur before the operator picks up the line, then the TERMINATOR™ will shut down and let the subsequent alarm report.

Once the operator picks up on the line the TERMINATOR™ operates independently of the selection above (independent of DIP SWITCH #6). The operator is notified that a subsequent alarm is pending by "beep-bop

.... beep-bop beep” warning. If the operator does nothing and ignores the warning, the FALSE ALARM TERMINATOR™ will disconnect in 30 seconds allowing the subsequent alarm to report. If the operator wishes to ignore the subsequent alarm, the operator sends the “EXTEND” command (a **7** on the touch tone phone). If the operator wishes to allow the subsequent alarm to report immediately, a **9** is sent by the operator which shuts down the module and allows the subsequent alarm to report.

WARNING: If your communicator/panel DOES NOT sense dial tone before dialing, a two second pause is required before dialing to provide adequate time for a fresh line to be restored.

TABLE 6: TOUCH-TONE® COMMAND SUMMARY.

COMMAND	FUNCTION
1	TALK ONLY
2	LISTEN ONLY
3	HIGH GAIN LISTEN ONLY
7	RESET SHUT DOWN TIMER or IGNORE SUBSEQUENT ALARM
8	SHUT DOWN MODULE & INITIATE 5 MINUTE CALLBACK WINDOW
9	SHUT DOWN MODULE or ALLOW SUBSEQUENT ALARM TO REPORT
* 5 5 *	ACTIVATE MODULE FROM CALL BACK MODE

5.4 MICROPHONE ZONE CONTROL.

The FALSE ALARM TERMINATOR™ has provisions for controlling microphone zones. This provides the central station with the ability to activate or de-activate any or all microphone zones. There are three microphone zones. (The microphones connected to the RJ-31 are connected in parallel to zone 3.)

When the module activates, all microphones are active. Touch tone command **4** activates the microphone command sequence. To activate microphone zone one (M1) only, the command **4 1** is sent. To activate microphone zone two (M2) only, the command **4 2** is sent. To activate microphone zone three (M3) only, the command **4 3** is sent. To turn OFF ALL microphones, the command **4 0** is sent. To turn ALL microphones ON, the command **4 *** is sent.

TABLE 7: MICROPHONE TOUCH-TONE® COMMAND SUMMARY.

TOUCH-TONE® COMMAND	FUNCTION
4 1	ZONE 1 ONLY (ON)
4 2	ZONE 2 ONLY (ON)
4 3	ZONE 3 ONLY (ON)
4 0	ALL MICROPHONES OFF
4 *	ALL MICROPHONES ON
4 4 thru 4 9, 4 #	INVALID; IGNORES ENTRY(both digits)

5.5 SPEAKER ZONE CONTROL.

Only one (1) speaker zone exists on the FALSE ALARM TERMINATOR™. If zoning of speakers is desired, connect an Eagle Speaker Zone Expander to the **AUX BOARD** connector. If an Eagle Speaker Zone Expander is connected, the speaker (**SPK & SPK**) output on the module remain active at all times, independent of which zone is selected.

5.6 INTERNAL CONTROLS.

5.6.1 CENTRAL STATION DETECTION.

The FALSE ALARM TERMINATOR™ features Eagle's exclusive central station detection. This feature allows the audio module to detect a central station receiver dropping off line before an operator picks up on the two way line. When detected (about 15 to 20 seconds post receiver hang up) the module will shut itself down and initiate the five minute call back window.

This feature also is useful if the central station operator does not send the shut-down command. In this case the module will shut down (after 15 to 20 seconds post operator hang up). It will not activate the call back mode.

6.0 OPTIONAL CONNECTIONS.

6.1 INTERNAL SIREN.

The internal siren driver requires an input from the alarm panel. These inputs activate the internal driver. The inputs are the GREEN & BLUE wires on the **CONTROL/DIALER** header. When either of these inputs receives +12 VDC the FALSE ALARM TERMINATOR™ will generate a siren tone. The tone will cease during two way or when the input returns to its non-alarm condition.

6.2 EXTERNAL SIREN DRIVER.

See paragraph 3.4.2.

6.3 MODEL 1403 REMOTE CONTROL RELAY MODULE.

An Eagle Model 1403 Remote Control Relay Module may be connected to 1403 (**P9**) connector. The Model 1403 may be connected to provide additional central station control of the premises.

6.4 MODEL 1423 SPEAKER & MIC EXPANSION MODULE.

An Eagle Model 1423 Speaker & Mic Expansion Module may be connected to the 1423 connector. In addition to two microphone connections, the Model 1423 adds four speaker amplifiers and connections. All of the connections are connected to 2250 zone 3. They are NOT individually selectable. See Model 1423 manual for additional information.

7.0 NOTES & RETURNS.

TECHNICAL SUPPORT HOTLINE: 800.447.E₃ A₂ G₄ L₅ E

When using multiple speaker/mics at the subscriber end, be aware that loud background noise picked up by one speaker/mic will "drown out" the other speaker/mic.

As with all electronic devices, electrostatic discharges can damage the components. Handle the circuit board with care!

Features and specifications subject to change without notification.

Use of this equipment may be in violation of local laws. Please verify and obey all local laws. Eagle Security Products, Inc. does not assume any liability for the illegal use of this equipment.

Trademarks and Registered Trademarks are the property of their respective owners.

RETURNS:

IMPORTANT: COPY, COMPLETE AND RETURN THIS FORM WITH YOUR RETURNS.

NOTE: YOU MUST OBTAIN A RMA NUMBER FROM TECH SUPPORT FROM THE FIELD BEFORE RETURNING PRODUCT.

SECTION 1 (TO BE COMPLETED BY DEALER)	DATE/...../.....
RMA NUMBER	
DEALER NAME	PHONE NO. (.....)
ADDRESS	FAX NO. (.....)
CITY/STATE ZIP	CONTACT
SHIP TO	SHIP REPAIRED PRODUCT VIA:
.....	UPS UPS BLUE UPS RED
	YOUR FED-EX #

SECTION 2 (TO BE COMPLETED BY DEALER)

LINE #	PART NUMBER	DESCRIBE PROBLEM	COSMETIC REPAIR (Y/N)
1			
2			
3			

8.0 FCC REQUIREMENTS

1. The Federal Communications Commission (FCC) has established Rules which permit this device to be directly connected to the telephone network. Standardized jacks are used for these connections. This equipment should not be used on party lines or coin lines.
2. If this device is malfunctioning, it may also be causing harm to the telephone network; this device should be disconnected until the source of the problem can be determined and until repair has been made. If this is not done, the telephone company may temporarily disconnect service.
3. The telephone company may make changes in its technical operations and procedures; if such changes affect the compatibility or use of this device, the telephone company is required to give adequate notice of the changes. You will be advised of your right to file a complaint with the FCC.
4. If the telephone company requests information on what equipment is connected to their lines, inform them of:
 - a. The telephone number this unit is connected to
 - b. The ringer equivalence number
 - c. The USOC jack required
 - d. The FCC Registration number

Items 'b' and 'd' are indicated on the label.

The ringer equivalence (REN) is used to determine how many devices can be connected to your telephone line. In most areas, the sum of the RENs of all devices on any one line should not exceed five (5.0). If too many devices are attached, they may not ring properly.

5. In the event of equipment malfunction, all repairs should be performed by our Company or an authorized agent. It is the responsibility of users requiring service to report the need for service to our Company or to one of our authorized agents. Service can be obtained at:

Eagle Security Products, Inc.
11650 Genesee Street Suite #2
Alden, NY 14004-9630
SALES: 800.447.E₃A₂G₄L₅E or 716.937.0095
FAX: 716.937.3127
<http://www.eagle-security.com>

TECHNICAL SUPPORT HOTLINE: 800.447.E₃A₂G₄L₅E

or at your local installation company.

EAGLE SECURITY PRODUCTS FALSE ALARM TERMINATOR™
Complies with Part 68, FCC Rules
FCC Registration #: 1SYUSA-18688-KX-N
Ringer Equivalence : 0.0B

LIMITED WARRANTY

Eagle Security Products, Inc. Warrants that the products of its manufacture shall be free from defects in materials or workmanship to one year from the date of invoice if such goods have been properly installed, are subject to normal proper use, and have not been modified in any manner whatsoever. Upon return of the defective product to the nearest Eagle Security Products dealer, Eagle Security Products will, at its sole discretion, either repair or replace, at no cost to the customer, such goods as may be of defective material or workmanship. Customers outside the United States are to return products to their distributor for repair.

In addition, any out of the box failure will be replaced at no charge providing the unit has not been altered physically. Alterations include, but not limited to, soldering, the addition of tape / foam tape or any form of physical damage.

EAGLE SECURITY PRODUCTS, INC. SHALL NOT UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM LOSS OF PROPERTY OR OTHER DAMAGE OR LOSSES OWING TO THE FAILURE OF EAGLE SECURITY PRODUCTS' PRODUCTS BEYOND THE COST OF REPAIR OR REPLACEMENT OF ANY DEFECTIVE PRODUCTS.

EAGLE SECURITY PRODUCTS, INC. MAKES NO WARRANTY OF FITNESS OR MERCHANTABILITY AND NO OTHER WARRANTY, ORAL OR WRITTEN, EXPRESS OR IMPLIED, BEYOND THE ONE YEAR WARRANTY EXPRESSLY SPECIFIED HEREIN.